

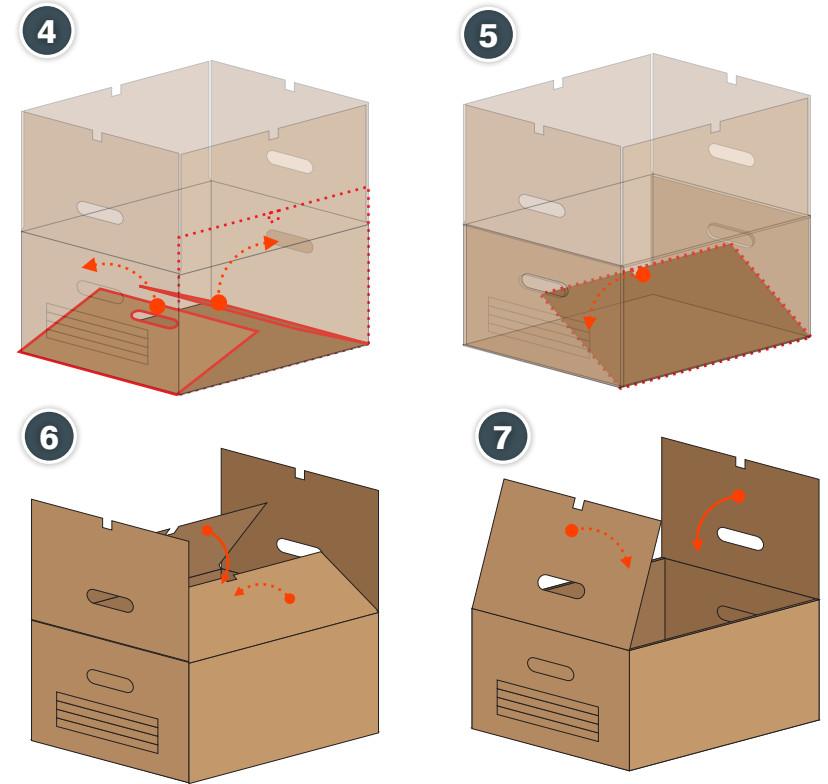
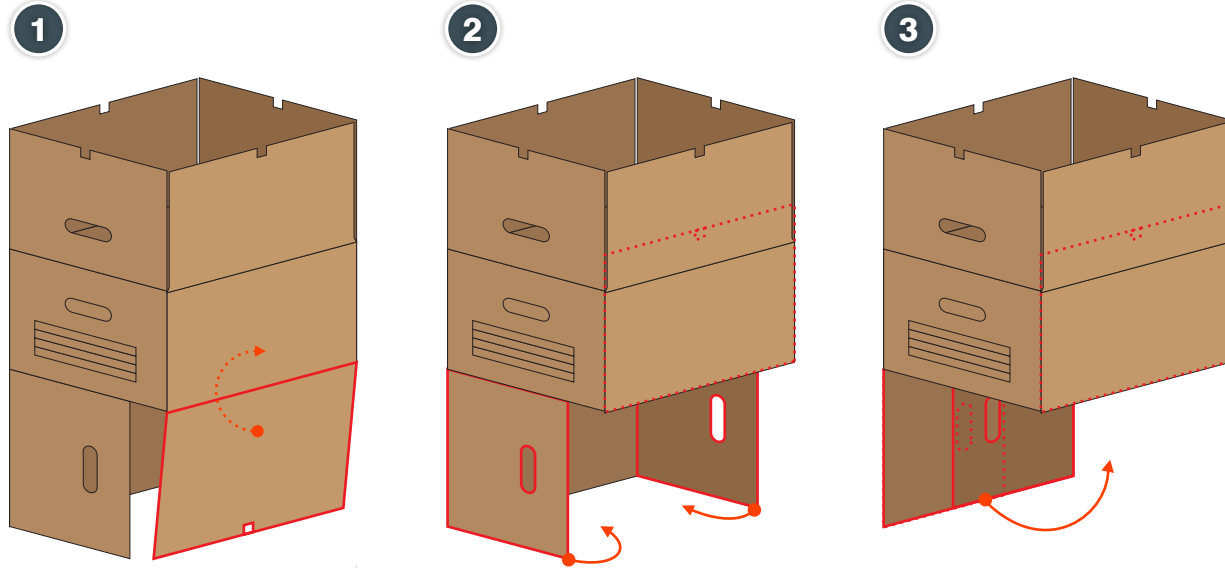


Box Assembly

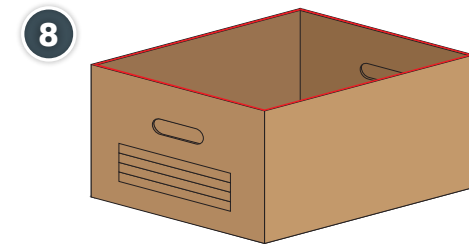

Lid Assembly

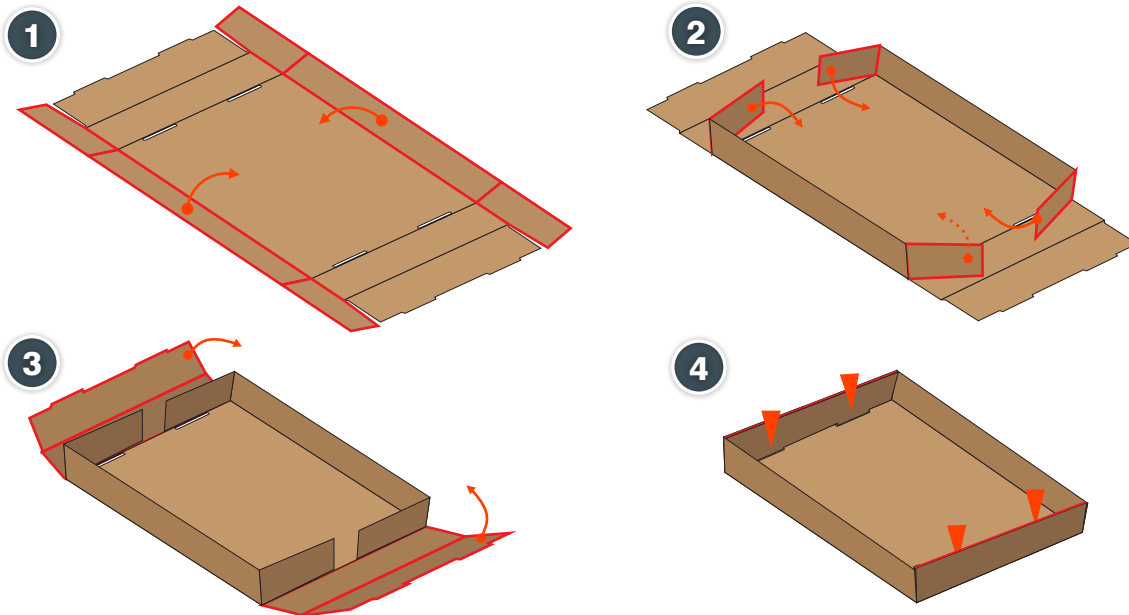

Tools Required

No tools are required

Safety Precaution

It is advisable to wear thin safety gloves to avoid cuts by sharp paper edges

Holds 20kg



scan for more info